


Single Momentary

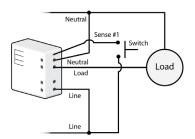

Note: cap the unused Sense #2 wire

Neutral Sense #2 Neutral Sense #1 Load Line

NSTE 🔱

Dual Momentary

5) After ensuring wires are firmly connected and that there is no exposed wire, turn on breaker/fuse
 After a few seconds, load will turn on (if wired into switch or fixture) and Micro module LED will turn green
6) Test by tapping Micro module on/off buttons

) Test by tapping Micro module on/off buttons Load will turn on and off Micro Medulo LED will turn groon when I

7)

- Micro Module LED will turn green when load is on and red when load is off
- If installing a single momentary or dual momentary switch
- a) Press and hold set button until it beeps LED will start blinking green
 - b) Press and hold set button until it beeps a second time LED will start blinking red
 - c) Press and hold set button until it beeps a third time LED will start blinking green

2443-222, 2443-422, 2443-522 Rev. 6/3/2013 11:06 AM / See Owner's Manual for Warranty Information. Protected under U.S. and foreign patents (see *www.insteon.com/patens*) © Copyright 2013 INSTEON, 16542 Millikan Ave., Irvine, CA 92606, 866-243-8022

- d) Perform the step that applies
 - For single momentary: slowly tap set button four times LED will continue blinking green
 - For dual momentary: slowly tap set button five times LED will start double-blinking green
 - To switch back to latching: slowly tap set button six times LED will start blinking green
- e) Once the mode is selected, press and hold set button until it double-beeps LED will stop blinking and turn green if load is on or red if load is off

Make Micro Module a Responder

Control Micro module from another INSTEON device.

Perform before finalizing installation of the switch, fixture or outlet. Or refer to the manual if already installed.


- 1) Press and hold controller button until it beeps Controller LED will start blinking
- 2) Tap Micro module on (or off if you want the load to turn off when the scene is activated) Connected load will respond appropriately
- 3) Press and hold Micro module set button until it double-beeps Controller will double-beep and its LED will stop blinking
- 4) Test by tapping controller button on and off Connected load will return to the state set in step #2



Use Micro module to control other INSTEON devices.

Perform before finalizing installation of the switch, fixture or outlet. Or refer to the manual if already installed.

- 1) Press and hold Micro module set button until it beeps Micro module LED will start blinking green
- 2) Turn responder on (or any other state such as on 50% or even off)
- 3) Press and hold responder set button until it double-beeps Micro module will double-beep and its LED will stop blinking
- 4) Test by tapping Micro module on/off buttons Responder load will respond appropriately Micro module LED will turn green when load is on and red when load is off

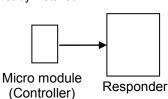

Controller

Micro module

(Responder)

Assign an X10 Address

- 1) Press and hold Micro module set button until it beeps Micro module LED will start blinking green
- 2) Send the X10 address 3 times (with or without commands) Example: A1-A1-A1-AON or A1-AON-A1-AON-A1-AON Micro module will double-beep and its LED will stop blinking
- 3) Test by sending X10 on and off commands Load will turn on and off

Owner's Manual and Tech Support

Visit: <u>http://www.insteon.com/support</u> for complete manual, online tech support and latest product documents. Call: INSTEON Support Line at 866-243-8022

FCC and IC Warnings

This device complies with FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorise aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radiolectrique subi, mme si le brouillage est susceptible d'en compromettre le fonctionnement.

CAUTION - To reduce the risk of overheating and possible damage to other equipment do not install to control a receptacle, a motor-operated appliance, a fluorescent lighting fixture, or a transformer-supplied appliance.

Gradateurs commandant une lampe a filament de tungstene – afin de reduire le risqué de surchauffe et la possibilite d'endommagement a d'autres materiels, ne pas installer pour commader une prise, un appareil a moteur, une lampe fluorescente ou un appareil alimente par un transformateur.

